

# LOADING A TOUCH 28 VENDING MACHINE IS AS EASY AS 1.2.3...



1

**LOAD SCRATCH-OFF GAMES 10" OR LONGER IN THE TOP (2) ROWS OF YOUR MACHINE. TICKETS SHOULD BE PLACED OVER THE TOP BAR AND UNDER BOTTOM BAR.**

2

**COMPLETE ROWS (3) THROUGH (7) BY PLACING TICKETS UNDER 10" LONG UNDER BOTH ROLLERS.**



3

**GUIDE THE TICKET EDGE UNTIL IT FIRMLY TOUCHES THE BLACK RUBBER FEED ROLLERS. THIS ACTIVATES THE TICKET SENSOR SWITCH, AND THE TICKETS LOAD AUTOMATICALLY.**

